


## SKODA OCTAVIA

### REAR SHOCK ABSORBERS REMOVAL/REFITTING

Tutorial file: Step-by-step process of disassembly and assembly of the rear shock absorbers of the Skoda Octavia (6Y).

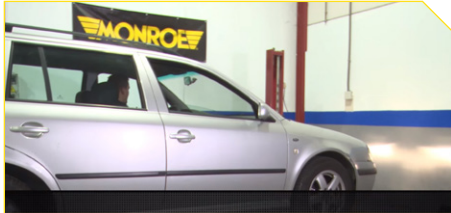

1. Lift the vehicle on the lift



5. Unscrew the indicated screws of the bottom mount



**50 Nm + 45°**


9. Fit the shock absorber to the car body by tightening the top mounting nuts to 50Nm + 45°



2. Disassemble the rear wheel



6. Unscrew the mounting nut and disassemble the suspension column in its components

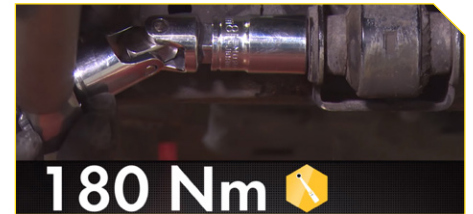

**180 Nm**


10. Tighten lower mounting screws to 180Nm



3. Use hydraulic jack to keep rear spring compressed



7. Compare the old shock absorber to the new one to be sure it fits

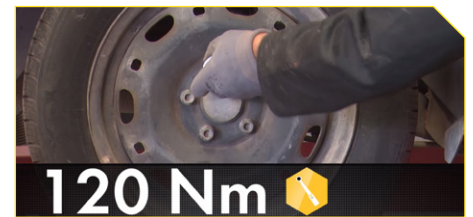


**120 Nm**

11. Fit rear wheels and tighten nuts to 120Nm



4. Unscrew the indicated screws of the top mount

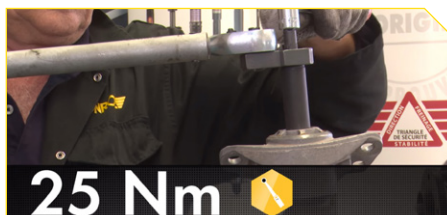

**25 Nm**

8. Replace shock absorber and its components with new ones and tighten top mounting nut to 25Nm



12. Return the car to the ground